


6'X6' ANCHOR TRENCH
 NOTES:
 SLOPE SURFACE SHALL BE FREE OF
 ROCKS AND CLODS.
 MATS/BLANKET SHOULD BE INSTALLED
 VERTICALLY DOWNSLOPE.

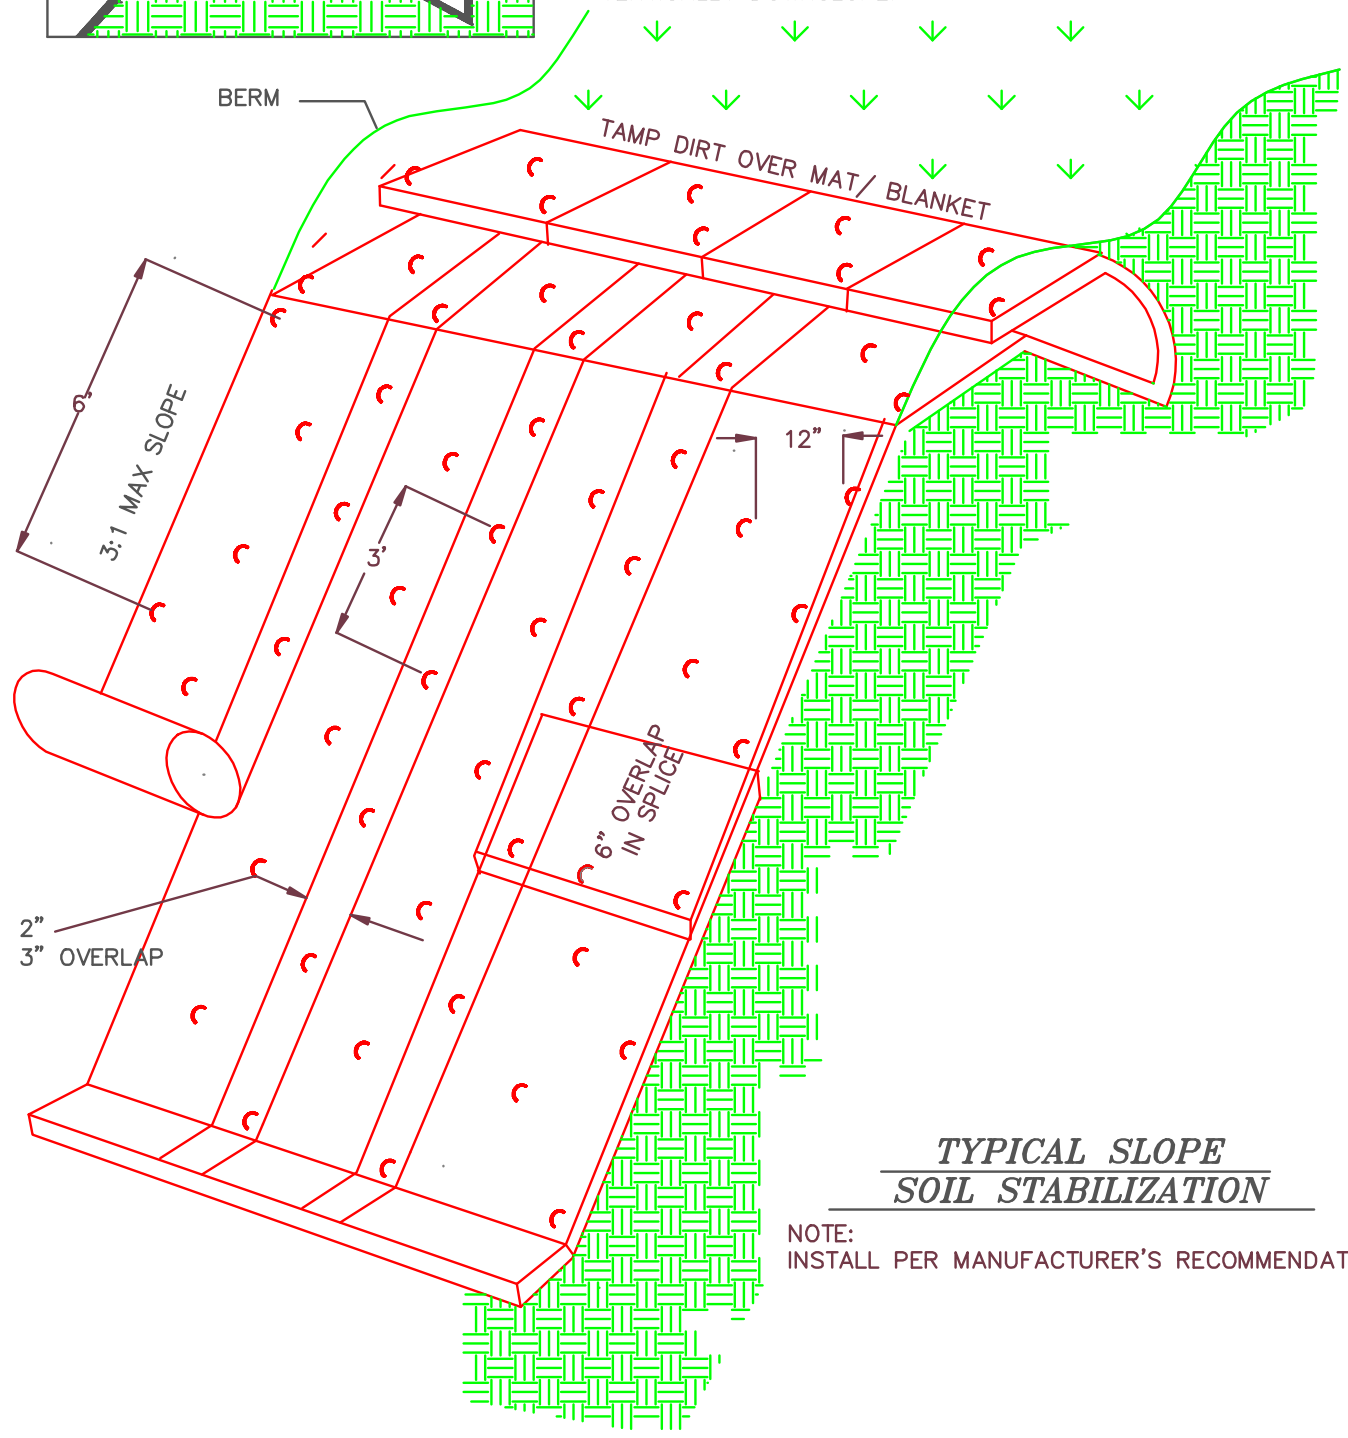

**TYPICAL SLOPE
 SOIL STABILIZATION**

NOTE:
 INSTALL PER MANUFACTURER'S RECOMMENDATION

